

SUSPENSION TRAUMA

Device designed to alleviate the negative effects of suspension trauma in the event of a fall by joining the straps found in the cases. The strap is made of polyester with steel buckles.

Weight: 230 g/Maximum load: 150 kg


Can be integrated into any harness strap Product code:

Article 11193.

Also available as an accessory for the **FALL-ARREST HARNESS** Article 11192/M/L and Article 11192/XL.




1
Open the zip of the cases on both sides of the device and unroll the straps.

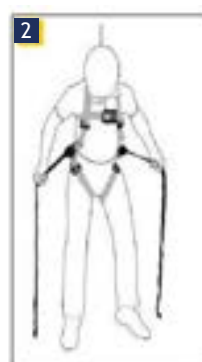

2
Bring the straps together.



3
Connect the two straps to each other via the buckle.

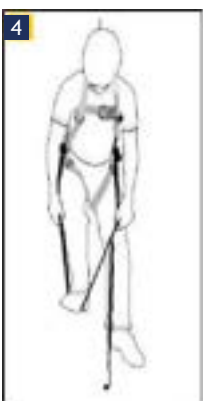

4
Place a foot on the buckle.



5
Stand on the buckle in order to relieve pressure from the straps of the harness.



6
Position the pelvic belt in such a way that it can reduce pressure and remain in a sitting position.